


SECTION 4.0

PASTA COOKER AND RETHERMALIZER DIGITAL CONTROLLER PROGRAMMING INSTRUCTIONS

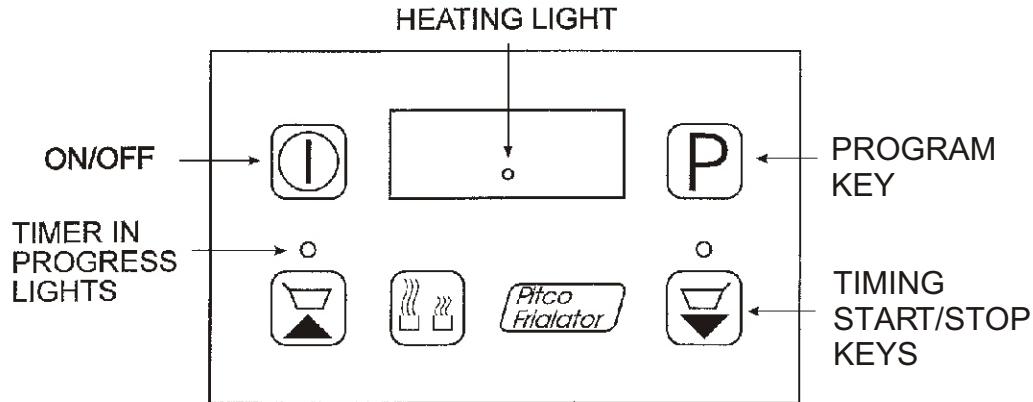

CONTROLLER FUNCTIONS
















- ON * Press to turn controller ON
- OFF * Press and hold for 3 seconds to turn controller OFF
- L BASKET/ TIMER* Press to start LEFT timer/basket lift
- R BASKET/ TIMER* Press to start RIGHT timer/basket lift
- BOIL SIMMER * Press , Display will show "**BOIL** or **SIM**" Note: Simmer mode runs at 190 F
- * Press until display shows desired selection
- PROGRAMMING * Press for programming mode

TIMER PROGRAMMING INSTRUCTIONS


ENTERING LEVEL 1 PROGRAMMING

- PASSWORD * Press , Display will show "**LOC** or **Pr09**" (Program)
- * If display shows "**LOC**" Press then , This will unlock the programming function and allow changes to be made to settings
- * Press , Display will show "**Pr09**" (Program) the indicator lights above both and functions key will illuminate.
- TIMER SET * Press or , Display will show "**XX**" (XX = current timer setting) Indicator above or function key will illuminate to indicate which (left or right) timer is being programmed
- * Press the or function keys to change set time
- * Press to save new timer setting
- * Press to exit programming

UPPER LEVEL PROGRAMMING INSTRUCTIONS

PROGRAMMING	*	Press  , Display will show "LOC or Pr09" (Program)
PASSWORD	*	If display shows "LOC" Press   then   , This will unlock the programming function and allow changes to be made to settings
SIMMER MODE TEMP	*	Press  , Display will show "Pr09" (Program) the indicator lights above both  and  functions key will illuminate.
SIMMER MODE TEMP	*	Press and hold  for 2 seconds, display will show "XXXX" you are now in SIMMER MODE TEMPERATURE PROGRAMMING (XXXX = current set temperature for the simmer mode)
SAVE / EXIT	*	<u>NOTE:</u> Press and hold  to save setting or exit at any time in the programming sequence.
	*	Press the  or  function keys to change set temperature
ACTUAL TEMP DISPLAY	T 1, T0 *	Press  , Display will show "T 1 or T 0" (T 1 = actual temperature always appearing display window, T 0 = SIM or BOIL will always appear in display window when controller is operation mode)
PASSWORD SET	ULOC * LOC	Press  , Display will show "LOC or ULOC" (LOC = turns pass word function ON so that a pass word is required to enter programming mode, ULOC = turns pass word requirement OFF)
BASKET LIFT	LIF1 *	Press  , Display will show "LIF1 or LIF2" (LIF1 = tells the controller that cooker has only a single basket lift, LIF2 = tells the controller cooker has two basket lifts)

TO SAVE SETTINGS OR EXIT PROGRAMMING

- * **NOTE: Press and hold  to save setting or exit at any time in the programming sequence.**

_ . _ _ F	Indicates controller is under temperature set point and burners are on
_ . _ _ F	Indicator light, when illuminated, indicates burners are on
Boil	Indicates unit is in boil mode
SIM	Indicates unit is in simmer mode