



## Pasta Water Control Operation

### Introduction:

Your appliance has been equipped with a water control regulation system to save time, energy, and resources. If your pasta cooker is equipped with a mixing valve or faucet option, the controls have been labeled to identify the function of the water controls.

**FILL**


**COOK  
REHEAT**

### Function:

**Fill-** To fill, or refill the cook tank with water to the fill line when the water level is low.

**Cook/Reheat-** To maintain the water level at the fill line while the appliance is cooking or reheating product.

### Operation:

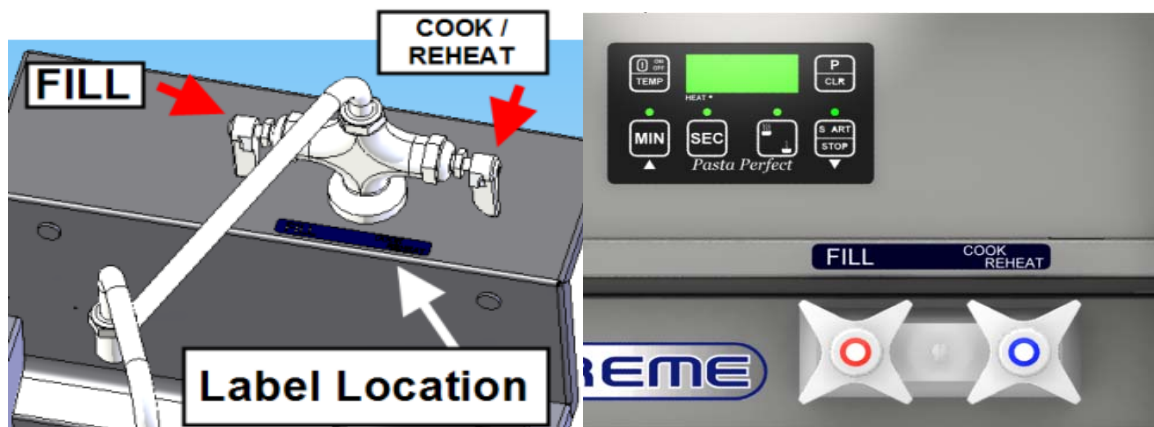

#### Faucet Control Option

#### Mixing Valve Control Option

The Fill control will be the left handle or knob, turn the control fully open to fill the tank with hot water to the fill line. When the water is at the proper level, close the handle fully.

The Cook / Reheat control will be the right handle or knob. When the appliance is being used for cooking or reheating product fully open the control to start the water trickle into the tank. This will allow a steady flow of 1/2 gallon of hot water per minute to flow into the tank to reduce water waste and maintain water temperature. At the end of the shift, fully close the control to shut off the water trickle when the appliance is shut down.